PROWALK

22 mm

POLISHED BRASS and ANODISED ALUMINIUM ADHESIVE and PUNCHED

22 mm

PWK... 22A

PWK... 30A PWK... 309AS

PWK... 229AS



KNURLED POLISHED BRASS with adhesive - thermo packed bar length 2,7 LM - pack. 20 Pcs - 54 LM

Article	HxLmm	
PWKOL 22A	22 x 22	
PWKOL 30A	30 x 30	



KNURLED POLISHED BRASS punched bar length 2,7 LM - pack. 20 Pcs - 54 LM

Article	HxLmm	
PWKOL 22F	22 x 22	
PWKOL 30F	30 x 30	

KNURLED POLISHED BRASS without holes - thermo packed bar length 2,7 LM - pack. 20 Pcs - 54 LM


Article	HxLmm	
PWKOL 22	22 x 22	
PWKOL 30	30 x 30	

KNURLED POLISHED BRASS with adhesive - thermo packed bar length 0,90 LM - pack. 20 Pcs

		 PACK
Article	H x L mm	
PWKOL 229AS	22 x 22	
PWKOL 309AS	30 x 30	

KNURLED POLI. BRASS punched with screws and screw anchors - thermo packed bar length 0,90 LM - pack. 20 Pcs

		PACK
Article	H x L mm	
PWKOL 309FS	30 x 30	

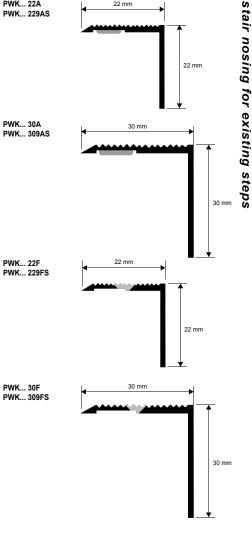

KNURLED ANODISED ALUMINIUM with adhesive - thermo packed bar length 2,7 LM - pack. 20 Pcs - 54 LM

Article	H x L mm	
PWK 22A	22 x 22	
PWK30A	30 x 30	

KNURLED ANODISED ALUMINIUM punched - thermo packed bar length 2,7 LM - pack. 20 Pcs - 54 LM

Article	HxLmm	
PWK 22F	22 x 22	
PWK 30F	30 x 30	

KNURLED ANODISED ALUMINIUM without holes - thermo packed bar length 2,7 LM - pack. 20 Pcs - 54 LM

Article	HxLmm	
PWK 22	22 x 22	
PWK 30	30 x 30	

KNURLED ANODISED ALUMINIUM with adhesive - thermo packed bar length 0.90 LM - pack. 20 Pcs

54. 15.194. 1910 III. pasia II. 100		_	 PACK
Article	H x L mm		
PWK 229AS	22 x 22		
PWK 309AS	30 x 30		


KNURLED ANOD. ALU. punched with screws and screw anchors - thermo packed bar length 0,90 LM - pack. 20 Pcs

Article	HxLmm	
PWK 229FS	22 x 22	
PWK 309FS	30 x 30	

Available in the finish: AO - AA - AB (AT, CH and SB available upon request with a minimum quantity order of 540 LM). The code of the selected colour must be added to the article code. E.g.: PWK... 22A (chosen finish Anod. Gold) PWKAO 22A.


COLOURS

(for a precise assessment of colours and finishes, see the relative enclosed sheet)



Anod. titanium alu., Champagne and Sand AVAILABLE UPON REQUEST (with a minimum quantity order of 540 LM)

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

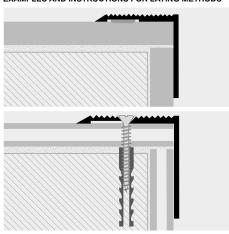

Adhesive version

1: Choose the suitable profile and cut it to the necessary length.
2: Degrease, wash and clean the solid surface thoroughly. 3: Remove the protective paper from the adhesive. 4: Lay the profile by applying pressure evenly over the whole surface without using a hammer **Punched version**

1: Choose the suitable profile and cut it to the necessary length.
2: Mark the position of the holes using the existing holes in the profile as reference. 3: Insert the screw anchors into the drilled holes. 4: Fix the profile using flathead screws suitable for the relative slots in the